

<b>1</b>	<b>APPLICATION.....</b>	<b>3</b>
<b>2</b>	<b>DESCRIPTION (FIG. A) .....</b>	<b>3</b>
<b>3</b>	<b>PACKAGE CONTENT LIST.....</b>	<b>3</b>
<b>4</b>	<b>SYMBOLS .....</b>	<b>3</b>
<b>5</b>	<b>GENERAL POWER TOOL SAFETY WARNINGS .....</b>	<b>4</b>
5.1	<i>Work area .....</i>	5
5.2	<i>Electrical safety.....</i>	5
5.3	<i>Personal safety .....</i>	5
5.4	<i>Power tool use and care.....</i>	5
5.5	<i>Service.....</i>	6
<b>6</b>	<b>ADDITIONAL SAFETY INSTRUCTIONS FOR LAWN MOWERS ..</b>	<b>6</b>
<b>7</b>	<b>ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND <sup>2</sup> CHARGERS .....</b>	<b>7</b>
7.1	<i>Batteries .....</i>	7
7.2	<i>Chargers.....</i>	8
<b>8</b>	<b>CHARGING AND INSERTION OR REMOVAL OF BATTERY .....</b>	<b>8</b>
8.1	<i>Charger indications .....</i>	8
8.2	<i>Insertion of battery (Fig. 1).....</i>	9
8.3	<i>To remove battery pack.....</i>	9
8.4	<i>Battery capacity indicatorn (Fig. 2).....</i>	9
<b>9</b>	<b>ASSEMBLY .....</b>	<b>9</b>
9.1	<i>Unfolding and adjusting handle assembly (Fig. 3) .....</i>	9
9.1.1	<u>To raise handle assembly .....</u>	9
9.1.2	<u>To lower the handle assembly: (Fig. 4).....</u>	10
9.2	<i>Installing the wire fixed buckle (Fig. 5).....</i>	10
9.3	<i>Installing the grass catcher (for rear bagging operation) (Fig. 6) .....</i>	10
<b>10</b>	<b>OPERATION.....</b>	<b>10</b>
10.1	<i>Starting/stopping the mower.....</i>	10
10.2	<i>Setting blade height (Fig. 7) .....</i>	10
10.3	<i>To adjust the blade height:.....</i>	11
10.4	<i>Retrofitting for mulching mower (Fig. 8) .....</i>	11

10.4.1	What is mulching.....	11
<b>11</b>	<b>CLEANING AND MAINTENANCE.....</b>	<b>11</b>
11.1	<i>Cleaning.....</i>	11
11.2	<i>Blade maintenance .....</i>	11
11.3	<i>Replacing the blade .....</i>	12
<b>12</b>	<b>TECHNICAL DATA .....</b>	<b>12</b>
<b>13</b>	<b>NOISE .....</b>	<b>12</b>
<b>14</b>	<b>WARRANTY .....</b>	<b>12</b>
<b>15</b>	<b>ENVIRONMENT .....</b>	<b>13</b>
<b>16</b>	<b>DECLARATION OF CONFORMITY .....</b>	<b>14</b>

# LAWN MOWER 40V 370MM POWDPG7561

## 1 APPLICATION

The purpose of this lawn mower is to cut grass. This lawn mower has been designed for cutting grass areas in a domestic garden. It is not designed for commercial use.  
Not suitable for professional use.



**WARNING!** For your own safety, read this manual and general safety instructions carefully before using the appliance. Your power tool should only be passed on together with these instructions.

## 2 DESCRIPTION (FIG. A)

- |                            |   |
|----------------------------|---|
| 1. Start button            | 9. Upper handle lock                      |
| 2. Key                     | 10. Upper handle                          |
| 3. Grass catcher bag       | 11. Bail                                  |
| 4. Wire fixed buckle       | 12. Battery pack (NOT INCLUDED)           |
| 5. Lower handle lock       | 13. Battery pack release button           |
| 6. Height adjustment lever | 14. Charger (NOT INCLUDED)                |
| 7. Battery cover           | 15. Battery capacity indicator            |
| 8. Lower handle            | 16. Button for battery capacity indicator |

## 3 PACKAGE CONTENT LIST

- Remove all packaging materials.
- Remove remaining packing and package inserts (if included).
- Check that the package contents are complete.
- Check the appliance, the power cord, the power plug and all accessories for transportation damage.
- Keep the packing materials as long as possible till the end of the warranty period. Dispose it into your local waste disposal system afterwards.



**WARNING: Packaging materials are not toys! Children must not play with plastic bags! Danger of suffocation!**

Lawn mower

Mulching wedge

Key

Manual

Grass catcher bag



**If any parts are missing or damaged, please contact your dealer.**

## 4 SYMBOLS

In this manual and/or on the machine the following symbols are used:

	Denotes risk of personal injury or damage to the tool.		Read manual before use.
	Keep bystanders away.		Warning! Flying objects!

	Keep hands and feet away from sharp parts.		Switch off and remove isolator key before adjusting, cleaning and before leaving the product unattended for any period.
	Indicates electrical shock hazard!		Never operate the machine in the rain or in damp or wet conditions. Moisture is an electrical shock hazard.
	Wait until all machine components have completely stopped before touching them. The blades continue to rotate after the machine is switched off, a rotating blade can cause injury.		Wearing of eye protection advised.
	In accordance with essential safety standards of applicable European directives.		class III - tool in which protection against electric shock relies on supply at safety extra-low voltage and in which voltages higher than those of safety extra-low voltages are not generated
	Wear gloves.		Wearing of protective shoes advised.
	Do not expose charger and battery pack to water		Do not incinerate battery pack or charger
	Ambient temperature 40°C max. (only for battery)		Use battery and charger only in closed rooms

## 5 GENERAL POWER TOOL SAFETY WARNINGS



Read all safety warnings and all instructions. Failure to follow all warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

**5.1 Work area**

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

**5.2 Electrical safety**

- Always check that the power supply corresponds to the voltage on the rating plate.
- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

**5.3 Personal safety**

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used whenever conditions require will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

**5.4 Power tool use and care**

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or sticking of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to stick and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could lead to a hazardous situation.

### **5.5 Service**

- Have your power tool serviced by a qualified person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

## **6 ADDITIONAL SAFETY INSTRUCTIONS FOR LAWN MOWERS**

- This device should not be used by children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and maintenance may not be performed by children.
- This unit can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, on condition that they have been given supervision or instruction concerning the safe use of the equipment and understand the resulting risks.
- Familiarize yourself with the instructions and the proper use of the machine.
- Avoid wearing loose clothing or clothing with hanging cords or belts.
- Worn or damaged parts must be replaced.
- Be especially careful when turning the mower around and when pulling it towards you.
- Do not start the engine when the grass bag is not installed.
- Be aware that on machines with multiple cutting blades, the movement of a cutting diameter can lead to rotations of the other blades on it.
- When adjusting the machine make sure that no fingers are trapped between moving cutting knives and fixed parts of the machine.
- Allow the engine to cool before storing machine.
- When servicing the cutting blade, note that even if the power supply is switched off, the blades can still be moving.
- Replace worn or damaged parts for safety. Use only original spare parts and accessories.
- The machine should be operated with a tripping current not exceeding 30 mA via a residual current device (RCD).
- Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations may restrict the age of the operator.
- Never mow while people, especially children or pets, are nearby.
- The operator or user is responsible for accidents or hazards occurring to other people or their property.
- Do not operate the lawnmower when barefoot or wearing open sandals, always wear substantial footwear and long trousers.
- Thoroughly inspect the area where the lawnmower is to be used and remove all stones, sticks, wires, bones and other foreign objects.

- Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged.
- Replace worn or damaged blades and bolts in sets to preserve balance.
- Mow only in daylight or in good artificial light.
- Avoid operating the lawnmower in wet grass, where feasible.
- Walk, never run.
- Never operate the appliance with defective guards or shields, or without safety device, for example deflectors and/or grass catchers in place.
- Mowing on banks can be dangerous:
  - Do not mow excessively steep slopes.
  - Always be sure of your footing on slopes or wet grass.
  - Mow across the face of slopes – never up and down.
  - Exercise extreme caution when changing direction on slopes.
  - Use extreme caution when stepping back or pulling the lawnmower towards you.
  - Never mow by pulling the mower towards you.
- Stop the blades if the lawnmower has to be tilted for transportation when crossing surfaces other than grass and when transporting the lawnmower to and from the area to be mowed.
- Do not tilt the machine when starting or switching on the motor, except if the machine has to be tilted for starting in long grass. In this case, do not tilt it more than absolutely necessary and tilt only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the machine to the ground.
- Switch on the lawnmower according to instructions and with feet well away from the blades.
- Do not put hands or feet near or under rotating parts.
- Keep clear of discharge opening at all times.
- Never pick up or carry the lawnmower while the motor is running.
- Make sure that all moving parts have come to a complete stop.
  - whenever you leave the mower;
  - before you remove blockages or clear blockages in the ejection channel;
  - before checking, cleaning or working on the mower;
  - when a foreign object is hit. Look for damage to the lawn mower and perform the necessary repairs before restarting and operating the mower.
- If the lawnmower starts to vibrate abnormally, an immediate check is required.
  - check for obstructions;
  - perform the necessary repairs on damaged parts;
  - make sure that all nuts, bolts and screws are tightened.
- Keep all nuts, bolts and screws tight to be sure that the lawnmower is in safe working condition.
- Check the grass catcher frequently for wear or deterioration.
- Replace worn or damaged parts for safety.

## **7 ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND CHARGERS**



**Use only batteries and chargers applicable for this machine.**

### **7.1 Batteries**

- Never attempt to open for any reason.
- Do not store in locations where the temperature may exceed 40 °C.
- Charge only at ambient temperatures between 4 °C and 40 °C.

- Store your batteries in a cool dry place (5 °C-20 °C). Never store batteries in discharged state.
- It is better for Li-ion batteries to discharge and reload them regularly (at least 4 times a year). The ideal charge for long-term storage of your Li-ion battery is 40% of capacity.
- When disposing of batteries, follow the instructions given in the section “Protecting the environment”.
- Do not cause short circuits. If connection is made between the positive (+) and negative (-) terminal directly or via accidental contact with metallic objects, the battery is short circuited and an intense current will flow causing heat generation which may lead to casing rupture or fire.
- Do not heat. If batteries are heated to above 100 °C, sealing and insulating separators and other polymer components may be damaged resulting in electrolyte leakage and/or internal short circuiting leading to heat generation causing rupture or fire. Moreover do not dispose of the batteries in fire, explosion and/or intense burning may result.
- Under extreme conditions, battery leakage may occur. When you notice liquid on the battery, proceed as follows:
  - Carefully wipe the liquid off using a cloth. Avoid skin contact.
  - In case of skin or eye contact, follow the instructions below:
    - ✓ Immediately rinse with water. Neutralize with a mild acid such as lemon juice or vinegar.
    - ✓ In case of eye contact, rinse abundantly with clean water for at least 10 minutes. Consult a physician.



**Fire hazard! Avoid short-circuiting the contacts of a detached battery. Do not incinerate the battery.**

## 7.2 **Chargers**

- Never attempt to charge non-rechargeable batteries.
- Have defective cords replaced immediately.
- Do not expose to water.
- Do not open the charger.
- Do not probe the charger.
- The charger is intended for indoor use only.

## 8 **CHARGING AND INSERTION OR REMOVAL OF BATTERY**

### 8.1 **Charger indications**

Connect the charger to the power outlet socket

- Solid green: ready to charge
- Flickering red: charging
- Solid green: charged
- Solid green en red: battery or charger damaged



**Note: if the battery does not fit properly, disconnect it and confirm that the battery pack is the correct model for this charger as shown on the specification chart. Do not charge any other battery pack or any battery pack that does not securely fit the charger.**

1. Frequently monitor the charger and battery pack while connected
2. Unplug the charger and disconnect it from the battery pack when finished.
3. Allow the battery pack to cool completely before using it.
4. Store the charger and battery pack indoors, out of reach of children.



**NOTE:** If battery is hot after continuous use in the tool, allow it to cool down to room temperature before charging. This will extend the life of your batteries.

### 8.2 Insertion of battery (Fig. 1)



**WARNING** Always remove battery pack (12) and key (2) from your tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack and key will prevent accidental starting that could cause serious personal injury.

- Raise the battery cover (7).
- Place the battery pack (12) in the mower.
- Align raised ribs on battery pack with grooves in the mower's battery port.
- Push down into battery compartment until the battery clicks into place.
- Lower the battery cover.



**WARNING** Make sure the latch on the top of the battery pack snaps in place and the battery pack is fully seated and secure in the mower's battery port before beginning operation. Failure to securely seat the battery pack could cause the battery pack to fall out, resulting in serious personal injury.

### 8.3 To remove battery pack

- Raise the battery cover.
- Press and hold the battery latch button at the top of the battery pack.
- Remove battery pack from the mower



**WARNING** To avoid serious personal injury, always remove the battery pack and key when carrying or transporting the tool.

### 8.4 Battery capacity indicator (Fig. 2)

There are battery capacity indicators (15) on the battery pack, you can check the capacity status of the battery if you squeeze the button (16). Before using the machine, please press switch trigger to check if the battery is full enough for properly working.

Those 3 LED might show the status of the capacity level of the battery:

- 3 LED's are lit: Battery fully charged
- 2 LED's are lit: Battery 60% charged
- 1 LED is lit: Battery almost discharged

## 9 ASSEMBLY

### 9.1 *Unfolding and adjusting handle assembly (Fig. 3)*

#### 9.1.1 To raise handle assembly

- Open the lower handle locks (5).
- Pull up and back on the lower handle (8) until it is aligned with the slot between the handle locks and the mower housing.



**NOTE:** If the lower handle is difficult to move, turn the lower handle locks (5) counterclockwise to free the handle.

- To secure the lower handle in place, close the lower handle locks.



**NOTE: If the lower handle (8) is loose or does not seat completely in the slot, turn the lower handle locks clockwise to secure the handle.**

- Open the upper handle locks (9).
- Pull up and back on the upper handle (10) to raise it into operating position. Make sure that the lower handle (8) is seated in the grooves at the bottom of the upper handle.
- To secure the upper handle in place, close the upper handle locks.



**NOTE: If the upper handle is loose or separated from the lower handle, tighten the knobs on the upper handle locks by turning them clockwise.**

#### 9.1.2 To lower the handle assembly: (Fig. 4)

- Open the upper handle locks (9)



**NOTE: If the handle lock is difficult to open, loosen the knobs on the upper handle locks by turning them counterclockwise.**

- Lower the upper handle (10).
- Open the lower handle lock (5).
- Push outward on each side of the lower handle (8) until it is free from the slot. Then, fold the handle to the front of the unit. Avoid pinching or trapping any cables.

#### 9.2 **Installing the wire fixed buckle (Fig. 5)**

- To secure the wire fixed buckle (4) in place.
- Make sure the buckle is installed securely.

#### 9.3 **Installing the grass catcher (for rear bagging operation) (Fig. 6)**

- Remove key and battery pack.
- Lift the rear discharge door.
- Lift the grass catcher by its handle and place under the rear discharge door so that the hooks on the grass catcher are seated onto the slots on the mower housing.
- Release the rear discharge door.
- Reinstall key and battery pack when you are ready to mow.

## 10 OPERATION

### 10.1 **Starting/stopping the mower**

- Raise the battery cover.
- Install battery pack.
- Insert the key (2) into the key hole.
- Lower the battery cover.
- Press and hold the start button (1). Pull the bail (11) toward the handle and release the button to start the mower.
- To stop the mower, release the bail (11).

### 10.2 **Setting blade height (Fig. 7)**

When shipped, the wheels on the mower are set to a low-cutting position. Before using the mower for the first time, raise the cutting position to the height best suited for your lawn. The average lawn should be between 30-40mm. to 60mm . during cool months and between 50mm and 30-40mm during hot months.

### 10.3 To adjust the blade height:

- Remove key and battery pack.
- To raise the blade height, grasp the height adjustment lever (6) and move it toward the front of the mower.
- To lower the blade height, grasp the height adjustment lever (6) and move it toward the back of the mower.
- Reinstall key (2) and battery pack when you are ready to mow.

### 10.4 Retrofitting for mulching mower (Fig. 8)



**WARNING: only with a stopped motor and standstill cutter.**

- Raise the rear cover and remove the grass catch bag.
- Push the mulching wedge into the deck. Lock the mulching wedge with the button into the opening on the deck.
- Lower the rear cover again.

#### 10.4.1 What is mulching

- When mulching, the grass is cut in one working step, then finely chopped and returned to the grass strip as natural fertilizer.
- Hints for mulch-mowing:
  - Regular cut-back by max. 2 cm from 6 cm to 4 cm grass height.
  - Use a sharp cutting knife
  - Do not mow wet grass
  - Set to max. motor speed
  - Only move at working pace
  - Regularly clean mulching wedge, housing inner side and mowing blade

## 11 CLEANING AND MAINTENANCE

### 11.1 *Cleaning*

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.
- We recommend that you clean the device immediately each time you have finished using it.
- Clean the equipment regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device.



**Never use solvents such as petrol, alcohol, ammonia water, etc. These solvents may damage the plastic parts.**

### 11.2 *Blade maintenance*

- Regularly remove grass and dirt from the blade.
- At the beginning of the gardening season, carefully examine the condition of the blade.
- If the blade is very blunt, sharpen or replace the blade.
- If the blade is damaged or worn, fit a new blade.

If the blade is slipping, put the screwdriver into the location hole, tighten the blade by wrench.



**Warning! Observe the following precautions:**

- Be careful not to cut yourself. Use heavy-duty gloves or a cloth to grip the blade.
- Only use the specified replacement blade.
- Do not remove the impeller for any reason.

### 11.3 Replacing the blade

For safety reasons, we recommend having the blade replaced by an authorized professional.



**Important: Wear work gloves!**

## 12 TECHNICAL DATA

Type	POWDPG7561
Voltage	40V
Rotation speed	3300 min-1
Cutting width	370 mm
Protection class	Class III
Collect box	35 l
Cutting height	25-75 mm
Material housing	Plastic
Grass box material	Nylon with plastic top cover
Number of height positions	6
Engine type	Brushless
Diameter front wheel	150 mm
Diameter rear wheel	203 mm
Central adjustable handle height	Yes
Top carrying handle	Yes
Foldable handle	Yes
Rear discharge	Yes
Collecting	Yes

## 13 NOISE

Noise emission values measured according to relevant standard. (K=3)

Acoustic pressure level LpA	71 dB(A)
Acoustic power level LwA	86 dB(A)



**ATTENTION! Wear hearing protection when sound pressure is over 85 dB(A).**

aw (Vibration)	0,59 m/s <sup>2</sup>	K = 1,5 m/s <sup>2</sup>
----------------	-----------------------	--------------------------

## 14 WARRANTY

- This product is warranted for a 36-month period effective from the date of purchase by the first user.
- This warranty covers all material or production flaws excluding : batteries, chargers, defective parts subject to normal wear & tear such as bearings, brushes, cables, and plugs, or accessories such as drills, drill bits, saw blades, etc. ; damage or defects resulting from maltreatment, accidents or alterations; nor the cost of transportation.
- Damage and/or defects resulting from inappropriate use also do not fall under the warranty provisions.

- We also disclaim all liability for any bodily injury resulting from inappropriate use of the tool.
- Repairs may only be carried out by an authorised customer service centre for Powerplus tools.
- You can always obtain more information at the number 00 32 3 292 92 90.
- Any transportation costs shall always be borne by the customer, unless agreed otherwise in writing.
- At the same time, no claim can be made on the warranty if the damage of the device is the result of negligent maintenance or overload.
- Definitely excluded from the warranty is damage resulting from fluid permeation, excessive dust penetration, intentional damage (on purpose or by gross carelessness), inappropriate usage (use for purposes for which the device is not suitable), incompetent usage (e.g. not following the instructions given in the manual), inexpert assembly, lightning strike, erroneous net voltage. This list is not exhaustive.
- Acceptance of claims under warranty can never lead to the prolongation of the warranty period nor commencement of a new warranty period in case of a device replacement.
- Devices or parts which are replaced under the warranty therefore remain the property of Varo NV.
- We reserve the right to reject a claim whenever the purchase cannot be verified or when it is clear that the product has not been properly maintained. (Clean ventilation slots, carbon brushes serviced regularly, etc.).
- Your purchase receipt must be kept as proof of date of purchase.
- Your appliance must be returned undismantled to your dealer in an acceptably clean state, (in its original blow-moulded case if applicable to the unit), accompanied by proof of purchase.
- Your tool must be charged at least 1x per month to ensure optimal operation of this tool.

## 15 ENVIRONMENT



Should your appliance need replacement after extended use, do not dispose of it with the household refuse, but in an environmentally safe way.

Waste produced by electrical machine items should not be handled like normal household rubbish. Please recycle where recycle facilities exist. Check with your Local Authority or retailer for recycling advice.

**16 DECLARATION OF CONFORMITY**



VARO – Vic. Van Rompuy N.V. - Joseph Van Instraat 9 - BE2500 Lier - BELGIUM, declares that,

product: Lawnmower  
trade mark: PowerPlus  
Model: POWDPG7561

is in conformity with the essential requirements and other relevant provisions of the applicable European Directives, based on the application of European harmonized standards. Any unauthorized modification of the apparatus voids this declaration.

European Directives (including, if applicable, their amendments up to the date of signature);

2011/65/EU  
2006/42/EC  
2014/30/EU  
2000/14/EC

Annex VI	LwA	
	Measured	84 dB(A)
	Guaranteed	86 dB(A)
	Notified Body	TÜV SÜD Industrie Service

GmbH - Germany

European harmonized standards (including, if applicable, their amendments up to the date of signature);

EN60335-1 : 2012  
EN60335-2-77 : 2010  
EN55014-1 : 2006  
EN55014-2 : 2015

Keeper of the Technical Documentation: Philippe Vankerkhove, VARO – Vic. Van Rompuy N.V.

The undersigned acts on behalf of the company CEO,

Ludo Mertens  
Certification Manager  
15/11/2019, Lier - Belgium